



Instrucciones de instalación / Mounting instructions:

160A - 200A

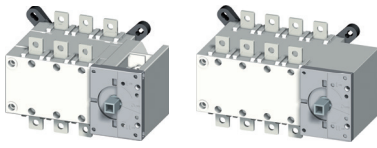


- ❶ 56AC3016
- ❷ 56AC4016
- ❸ 56AC3020
- ❹ 56AC4020

250A - 400A

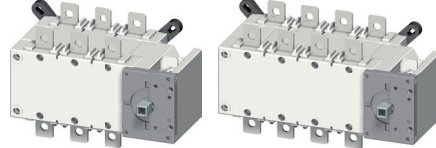


- ❺ 56AC3025
- ❻ 56AC4025
- ❼ 56AC3040
- ❽ 56AC4040

630A

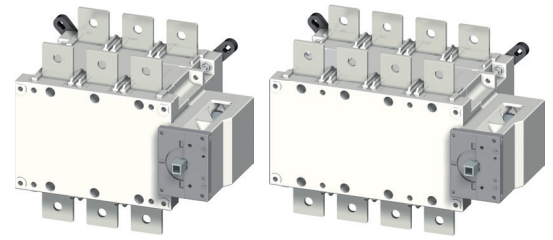




- ❾ 56AC3063
- ❿ 56AC4063

Conmutador y accesorios / Switch and accessories

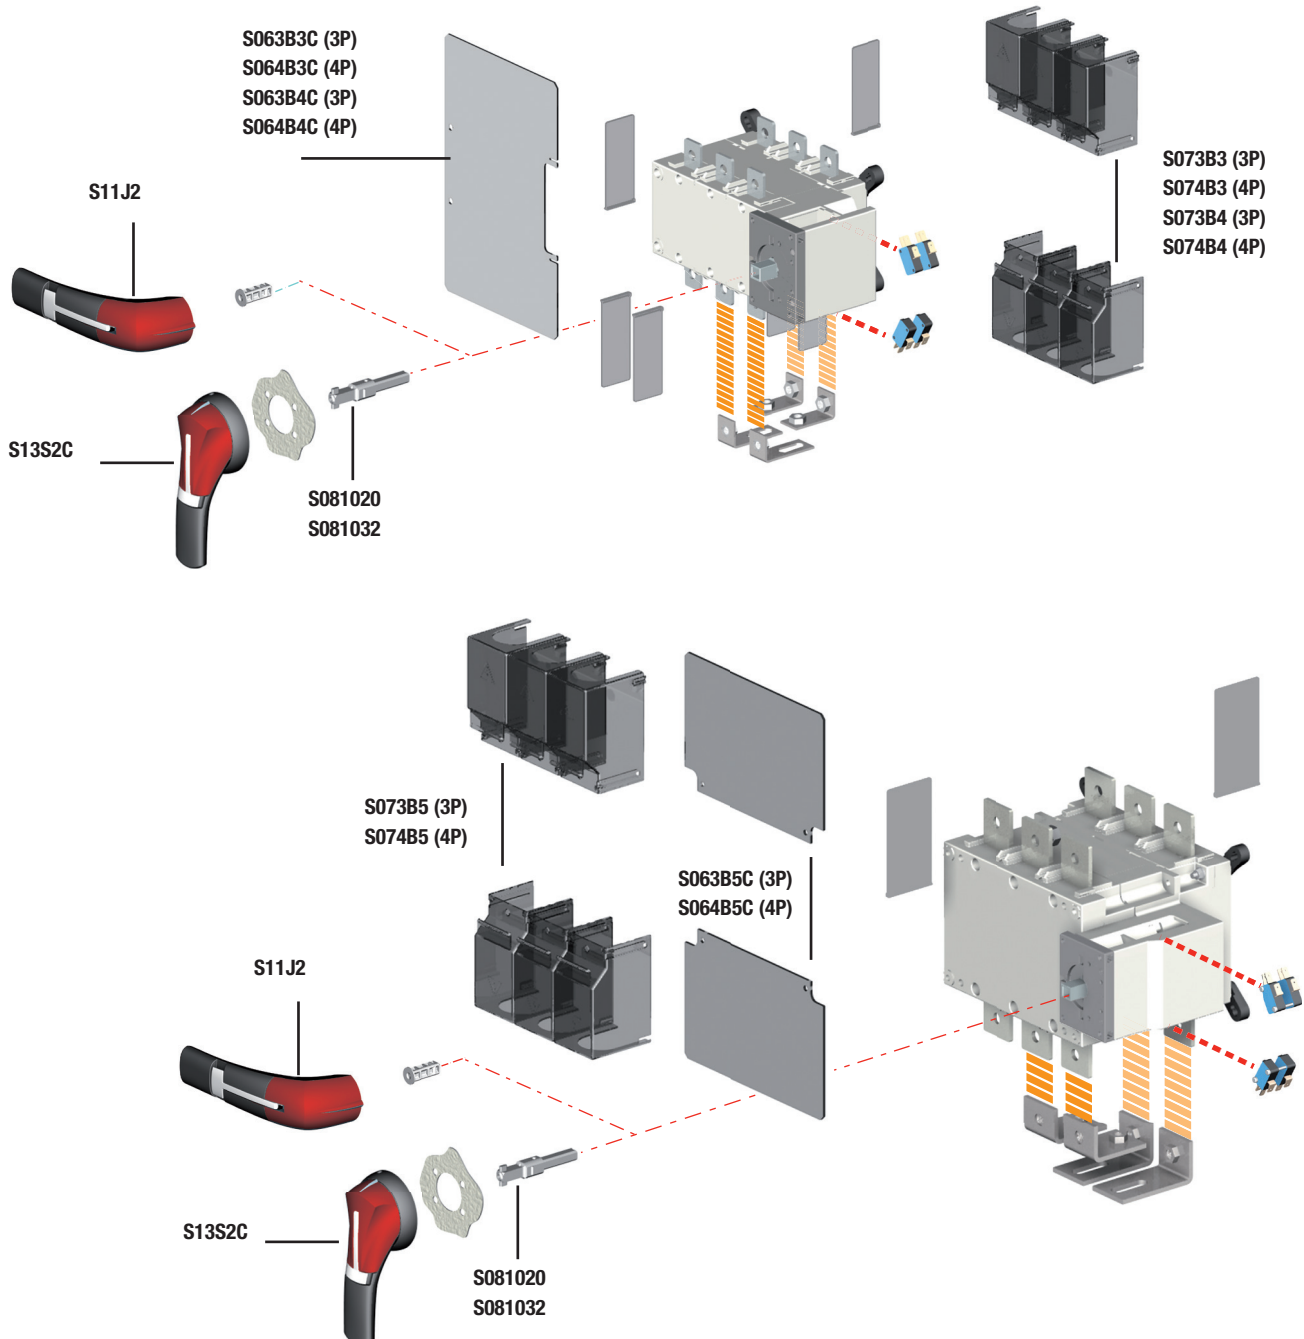

Dimensiones (in/mm) / Dimensions (in/mm)

- 1** 56AC3016
3 56AC3020
5 56AC3025
7 56AC3040
9 56AC3063
2 56AC4016
4 56AC4020
6 56AC4025
8 56AC4040
10 56AC4063

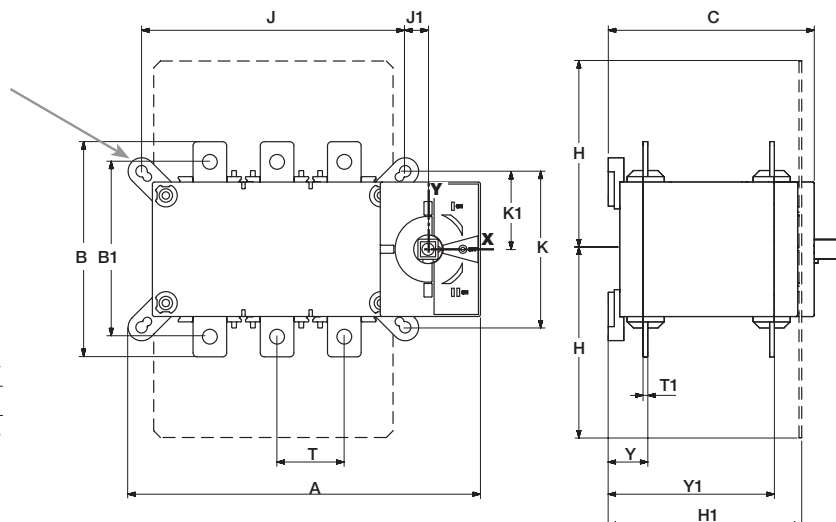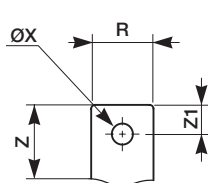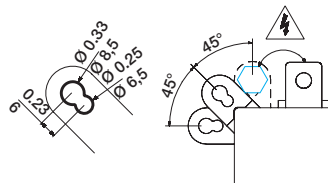


	A		B		B1		C		H		H1		J		J1		K		K1		R		T		T1		ØX		Y		Y1		Z		Z1	
	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
1 3	8.70	221	5.31	135	4.52	115	5.82	148	4.62	117.5	5.63	143	6.14	156	0.63	16	3.97	101	2.18	55.5	0.78	20	1.41	36	0.13	3.5	0.33	8.5	1.10	28	4.88	124	0.98	25	0.39	10
2 4	9.88	251											7.32	186																						
5 6	10.31	262	6.30	160	5.12	130	6.02	153	5.51	140	5.67	144	7.71	196	0.67	17	4.56	116	2.28	58	0.98	25	1.96	50	0.13	3.5	0.43	11	1.18	30	4.88	124	1.18	30	0.59	15
7 8	12.28	312											9.68	246																						
9 10	10.31	262	6.69	170	5.51	140	6.02	153	5.51	140	5.67	144	9.68	246	0.67	17	4.56	116	2.28	58	1.38	35	1.96	50	0.13	3.5	0.43	11	1.18	30	4.88	124	1.38	35	0.59	15
9 10	12.28	312																																		
9 10	12.56	319	9.25	235	8.07	205	9.09	231	8.26	210	8.38	213	9.68	246	0.63	16	6.93	176	3.46	88	1.26	32	2.56	65	0.19	5	0.51	13	1.69	43	7.08	180	1.47	37.5	0.59	15
9 10	14.92	379											12.04	306																						


- 1** 56AC3016
2 56AC4016
3 56AC3020
4 56AC4020

- 5** 56AC3025
6 56AC4025




- 7** 56AC3040
8 56AC4040

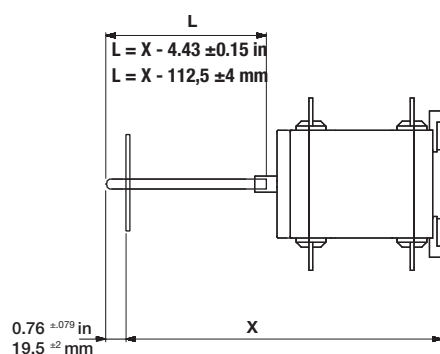


- 9** 56AC3063
10 56AC4063

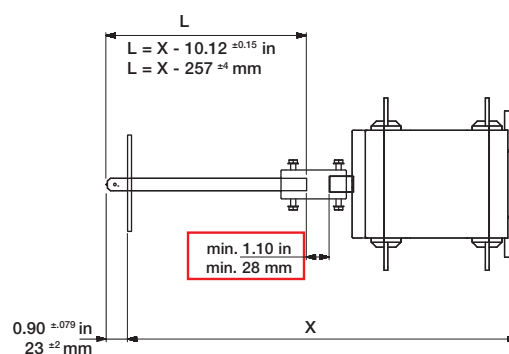


Sentido de montaje / Mounting orientation

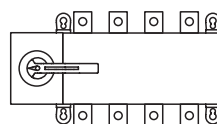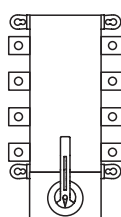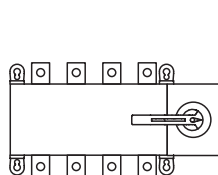


Posición de bloqueo (mando exterior) / Padlocking position (external operation)

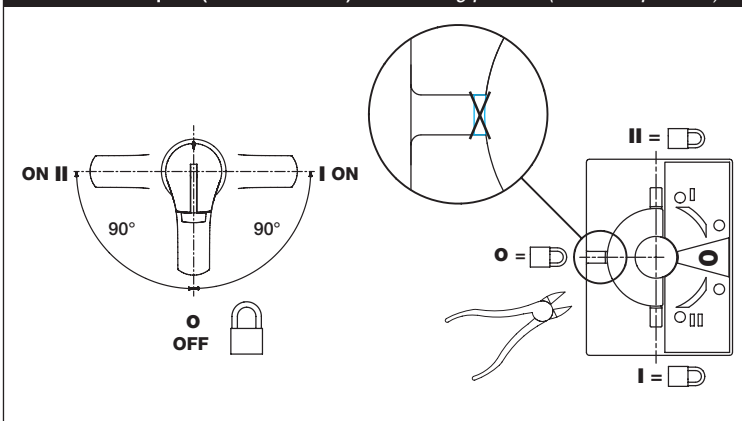


Posición de bloqueo (mando directo) / Padlocking position (Direct operation)

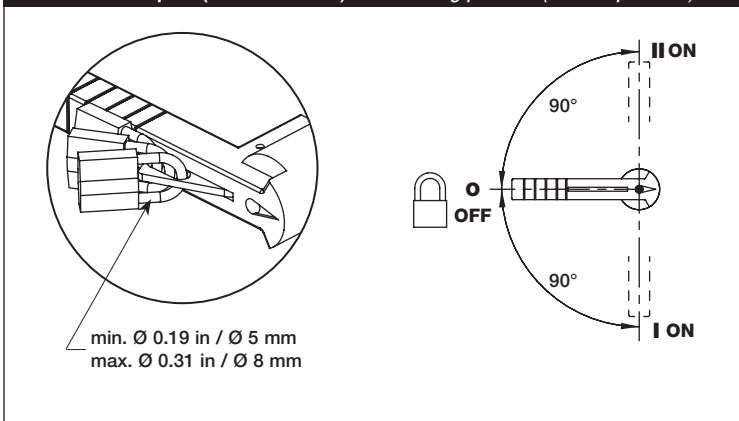

Montaje de los cubrebornes / Mounting of terminal covers

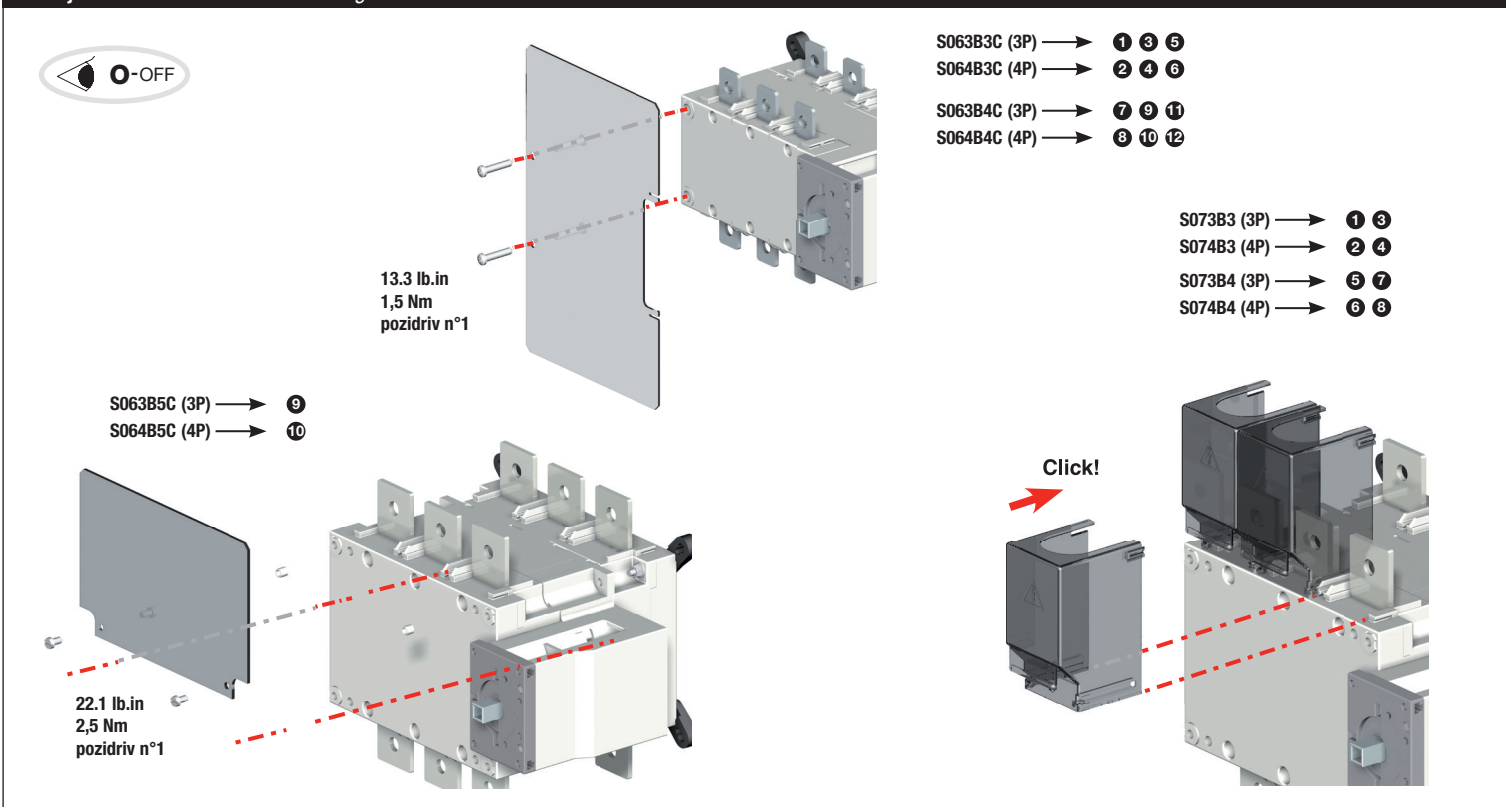


Montaje de los contactos auxiliares / Mounting of auxiliary contacts

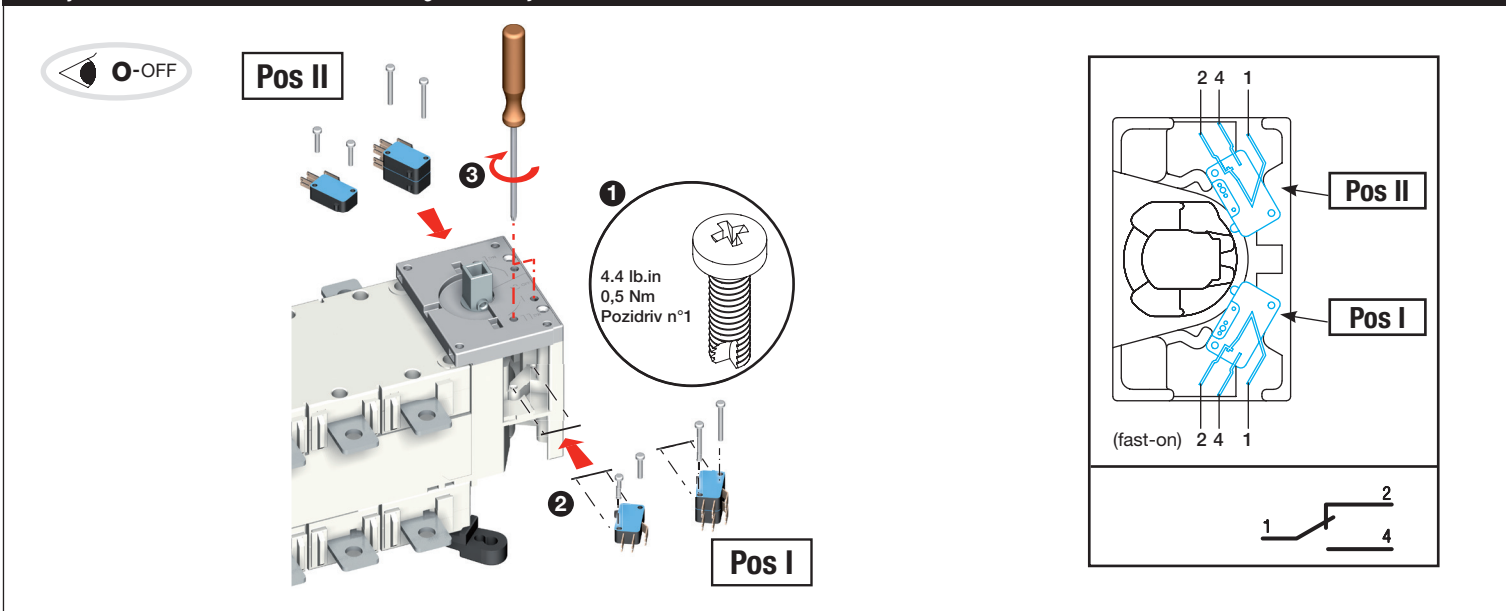

Conexión / Connection

	160 A	200 A	250 A	400 A	630 A
Sección nominal cables Cu (mm²) Nominal cables section Cu (mm²)	70	95	120	240 2 x 95	2 x 185
Secciones nominales barras Cu (mm²) Nominal bar dimensions Cu (mm²)	-	-	-	-	2 x 40 x 5
Anchura máxima barra Cu (mm) Maximal bars width Cu (mm)	25	25	32	32	50

	Pletina de puenteado Bridging bars
❶ 56AC3016	3x S041 0020
❷ 56AC4016	4x S041 0020
❸ 56AC3020	3x S041 0025
❹ 56AC4020	4x S041 0025
❺ 56AC3025	3x S041 0025
❻ 56AC4025	4x S041 0025
❼ 56AC3040	3x S041 0040
❽ 56AC4040	4x S041 0040
❾ 56AC3063	3x S041 0063
❿ 56AC4063	4x S041 0063

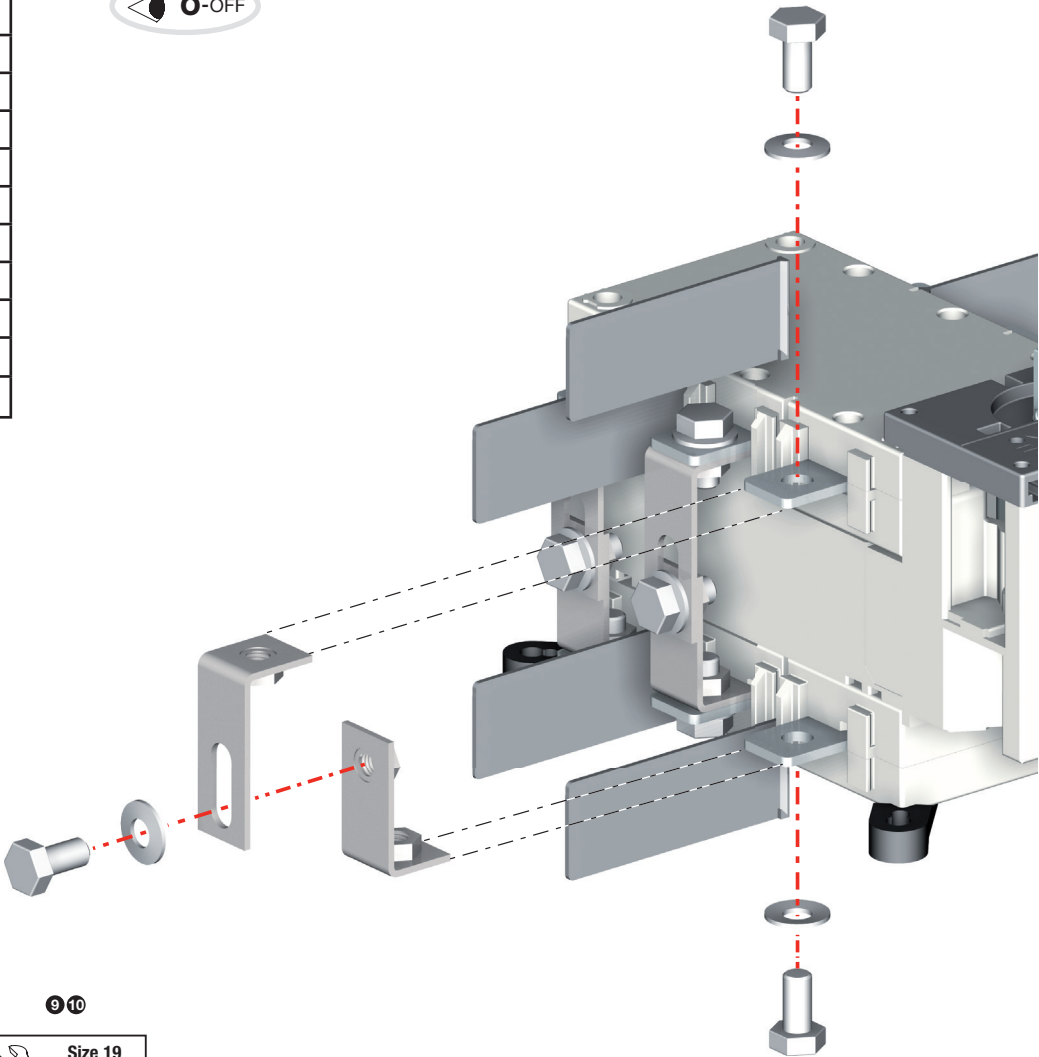


1234

5678

910



 Size 13



Size 17



Size 19

Par de apriete Torque

lb-in	Nm
115	13

Par de apriete Torque

lb-in	Nm
230	26

Par de apriete Torque

lb-in	Nm
398	45

⚠ PELIGRO / DANGER

TENSIÓN PELIGROSA Únicamente el personal de mantenimiento eléctrico especializado deberá instalar y prestar servicios de mantenimiento a este equipo. Cortar la alimentación del equipo antes de realizar cualquier trabajo en él. Utilice siempre un dispositivo detector de tensión adecuado para confirmar la falta de tensión en el equipo. Vuelva a colocar todos los dispositivos, las puertas y las cubiertas antes de poner el equipo en tensión. El incumplimiento de estas precauciones podrá causar la muerte o lesiones graves.

HAZARDOUS VOLTAGE This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off. Replace all devices, doors, and covers before turning on power to this equipment. Failure to follow these instructions will result in death or serious injury.