



Instrucciones de instalación / Mounting instructions:


800A - 1000A

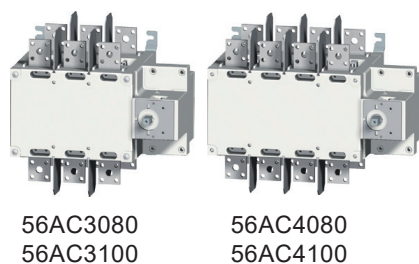



1250A

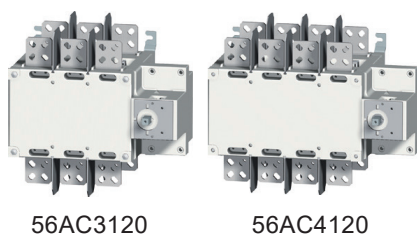

1600A

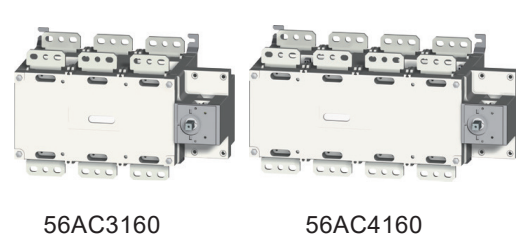


Interruptores y accesorios / Switch and accesories

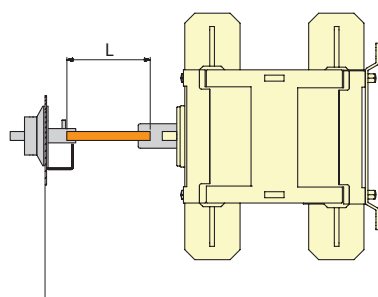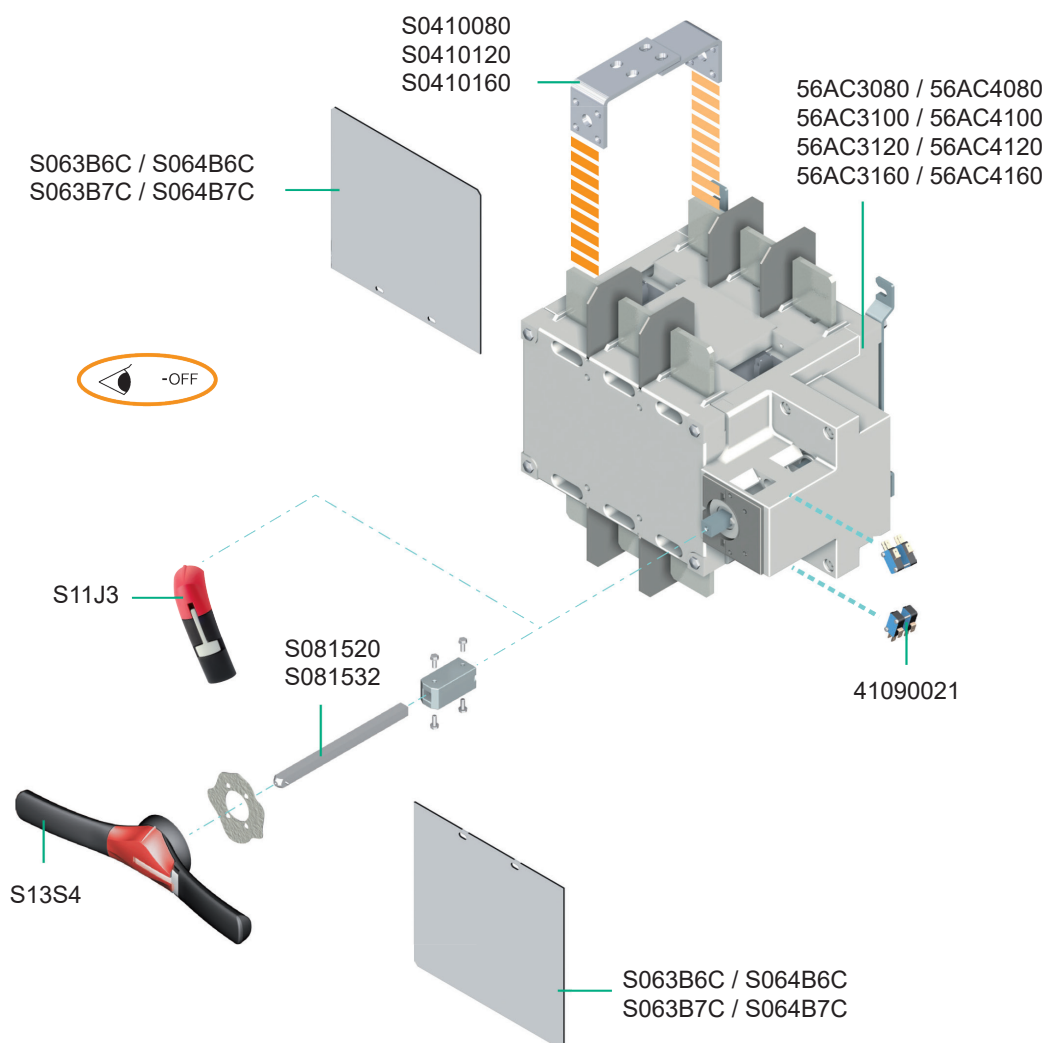

800A to 1600A

$L = X - 14.58 \pm 0.08 \text{ in}$
 $L = X - 370.5 \pm 2 \text{ mm}$





Sentido de montaje / Mounting orientation

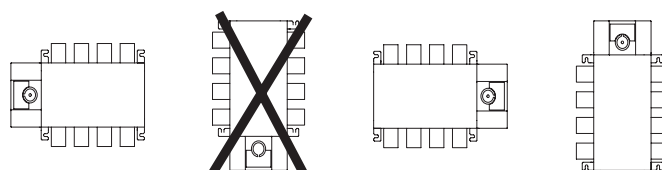

Dimensiones (in/mm) / Dimensions (in/mm)


- 1 56AC3080
- 2 56AC4080
- 3 56AC3100
- 4 56AC4100
- 5 56AC3120
- 6 56AC4120
- 7 56AC3160
- 8 56AC4160

Dual dimensions in/mm
Double dimensions in/mm
Doble dimensiones in/mm

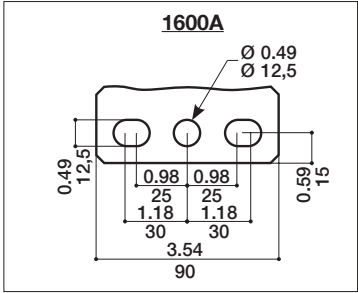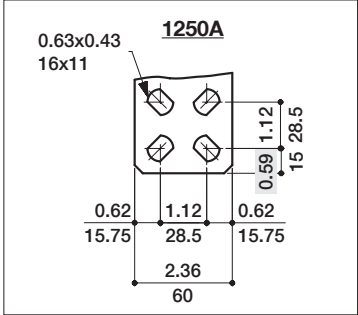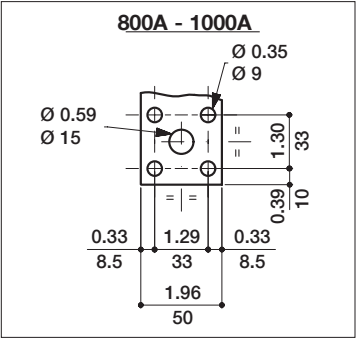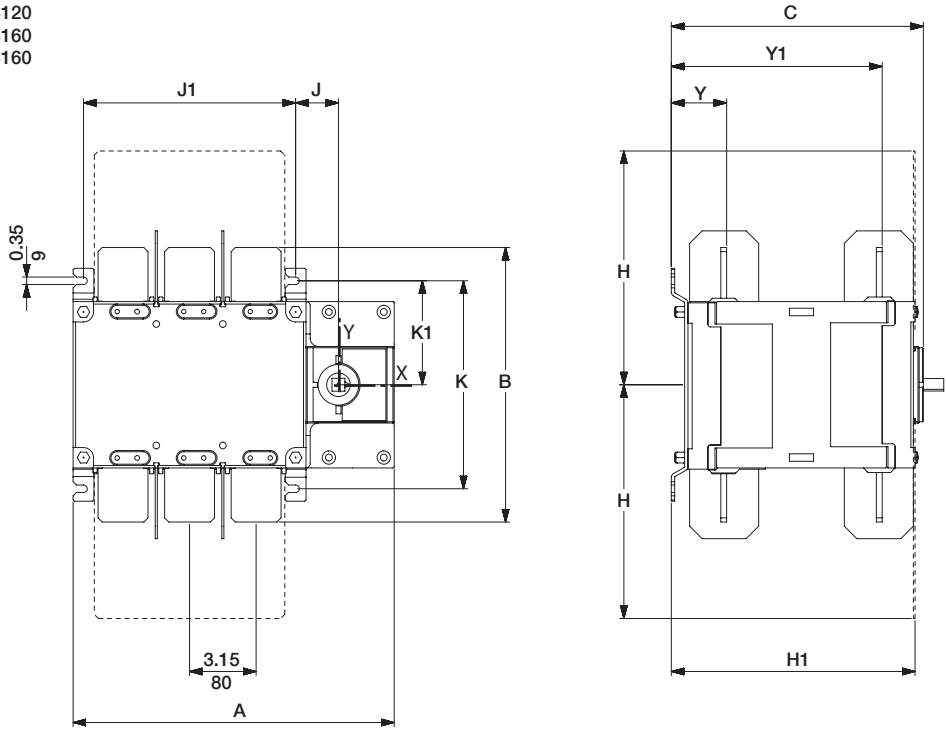


		A		B		C		H		H1		J		J1		K		K1		Y		Y1	
		in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
1 3	3P	15.19	386	12.63	321	11.93	303	9.05	230	11.53	293	2.02	51.5	10.04	255	9.84	250	4.92	125	2.62	66.5	9.98	253.5
2 4	4P	18.34	466											13.19	335								
5	3P	15.19	386	12.99	330	11.93	303	9.05	230	11.53	293	2.02	51.5	10.04	255	9.84	250	4.92	125	2.62	66.5	9.98	253.5
6	4P	18.34	466											13.19	335								
7	3P	18.82	478	11.33	288	11.93	303	9.05	230	11.53	293	2.02	51.5	13.66	347	9.84	250	4.92	125	2.65	67.5	9.98	253.5
8	4P	23.54	598											18.38	467								

Montaje de las pantallas / Mounting of protection screens

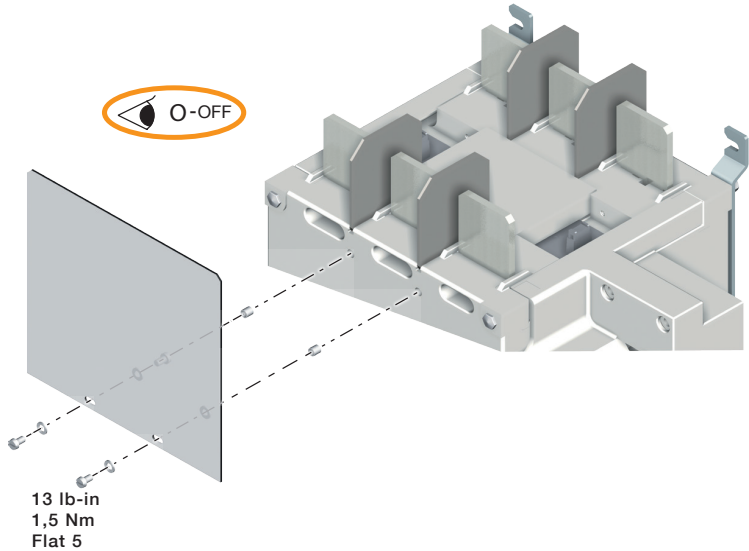


Ref.	
1 3 5	S063B6C
2 4 6	S064B6C
7	S063B7C
8	S064B7C

Montaje de los contactos auxiliares / Mounting of auxiliary contacts

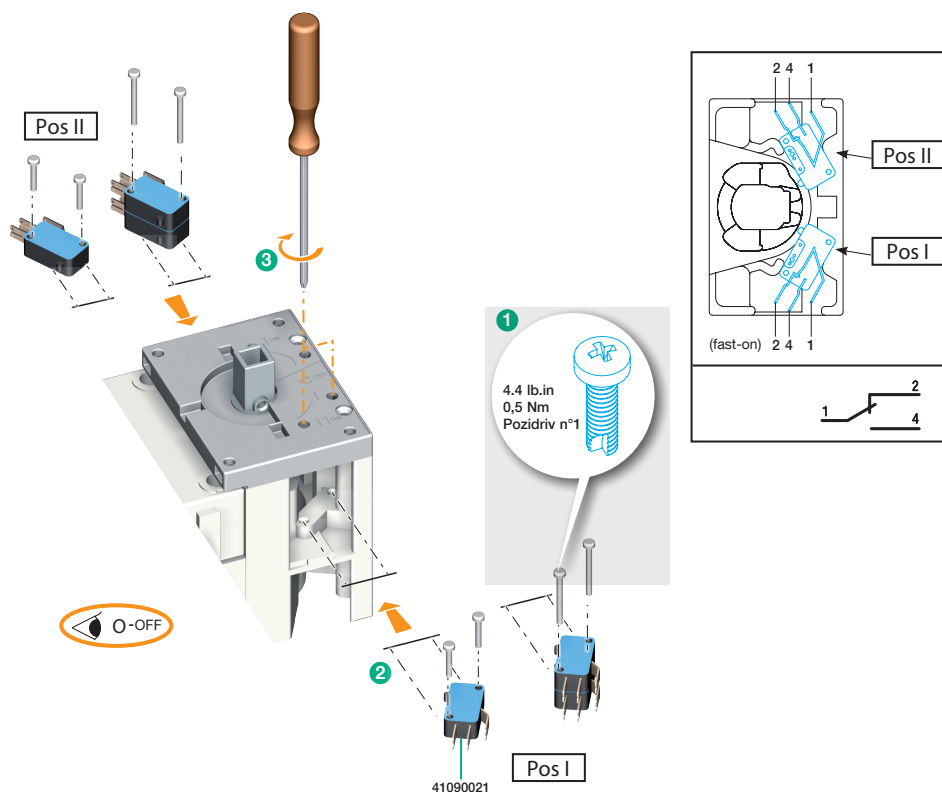

Montaje de las pletinas de union / Mounting of bridging bars

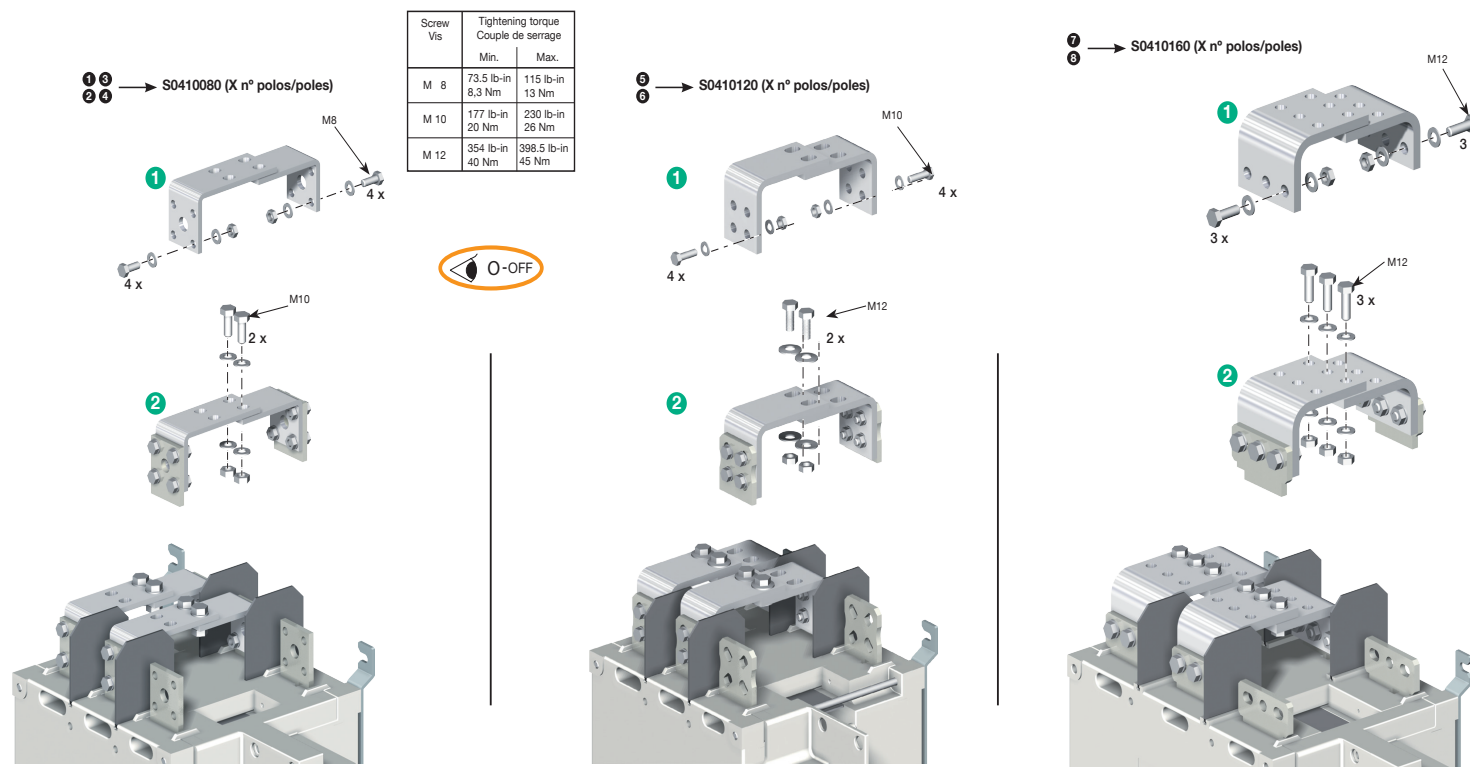

⚠ PELIGRO / DANGER

TENSIÓN PELIGROSA Únicamente el personal de mantenimiento eléctrico especializado deberá instalar y prestar servicios de mantenimiento a este equipo. Cortar la alimentación del equipo antes de realizar cualquier trabajo en él. Utilice siempre un dispositivo detector de tensión adecuado para confirmar la falta de tensión en el equipo. Vuelva a colocar todos los dispositivos, las puertas y las cubiertas antes de poner el equipo en tensión. El incumplimiento de estas precauciones podrá causar la muerte o lesiones graves.

HAZARDOUS VOLTAGE This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off. Replace all devices, doors, and covers before turning on power to this equipment. Failure to follow these instructions will result in death or serious injury.